


# 2" VALVE AND PLUNGER CUTTER INSTALLATION ON PAPER SYSTEMS EZ-SET TOTE



## Tote and Plunger Cutter Assembly

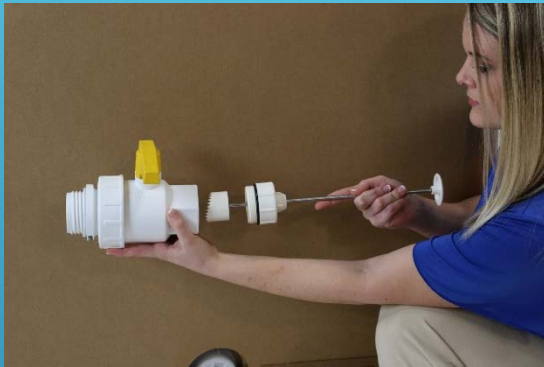

1) Remove bottom cap of the tote and screw the 2" Buttress threads into the evacuation fitment.



2) Once tight, open the valve as shown. The valve will not cut the membrane so there is no worry about loss of product



3) Screw the plunger cutter into the backside of the valve. Once tight, push the arrow portion in to puncture the membrane.



4) Place a small tray or bowl under the valve. This will be for the small amount of liquid you will lose when you remove the cutter. Retract the arrow portion.



5) Once retracted, close the valve before you remove the plunger cutter. Once the cutter is removed, hook your equipment up to the 2" female NPT threads on the valve.